Thermostat Instruction Sheet

ETD-5M1 Two Stage Thermostat

Note: See thermostat manufacturer's instructions for specific information or requirements.

ETD-5M1 Specifications

Range: 35° to 75°F (2° to 24°C)

Default Differential: 2.0°F (-16.5°C) Fixed

Operation: Two Stage, low voltage

Thermostatic Power: 22 AMP at 24/125/277 VAC

Contact Action: Opens on rise

Dimensions: 4.75" X 2.75" x 2.75"

Additional Features: Snap action switch, double pole, UL listed, and CSA Certified.

⚠ WARNING

To avoid electrical shock or damage to equipment, disconnect all power before installing or servicing.

Installation Instructions

❶ Remove cover of thermostat from base.
❷ Disconnect the power source.
❸ Locate in an area with good air circulation (no outside walls).
❹ Install the thermostat approximately 5 feet above floor level.
❺ Replace the cover onto base.

Figure 1 • ETD-5M1 Thermostat

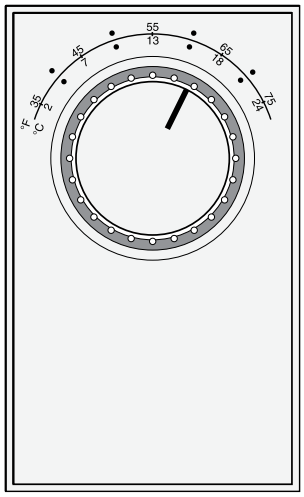

Figure 2 • ETD-5M1 Thermostat Wiring

Reference the heater specific installation and operation manual for field wiring.

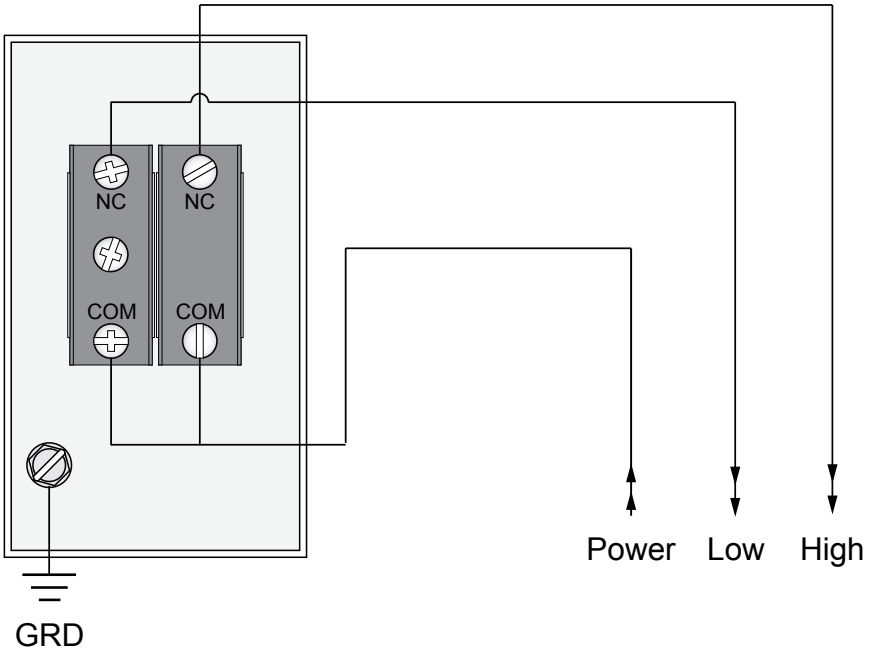

© 2021 Detroit Radiant Products Company